



# Disassembling Nokia 3560 Vibrator

Written By: Sam Ryan



## INTRODUCTION

This guide will show you how to remove the vibrator from the Nokia 3560.

---



### TOOLS:

- [64 Bit Driver Kit](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Back Cover



- Press down on the release latch on the bottom of the cover.
- Once the latch is released, lift the cover from the phone.

## Step 2 — Keypad



- Lift the front case off of the phone body.



### Step 3



- Lift the keypad off of the phone.

### Step 4 — Disassembling Nokia 3560 LCD Display




- The screen is held to the body by six screws.

## Step 5



- Unscrew the six screws with a Torx screwdriver (six-pointed star shaped bit).


## Step 6

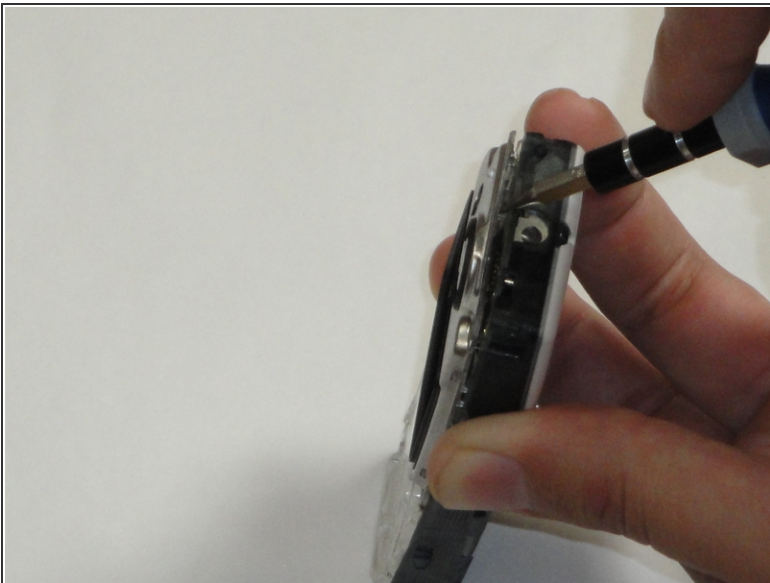

- Insert a flat screwdriver between the black body and plastic layer.




## Step 7

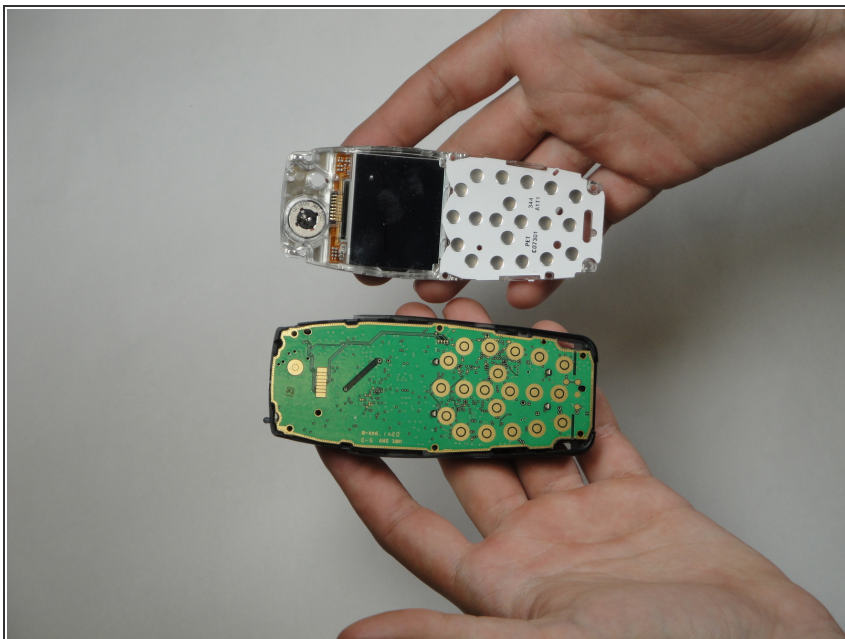


- Pry the layers apart. The LCD and plastic layer will lift out as one piece.

## Step 8 — Disassembling Nokia 3560 Logic Board

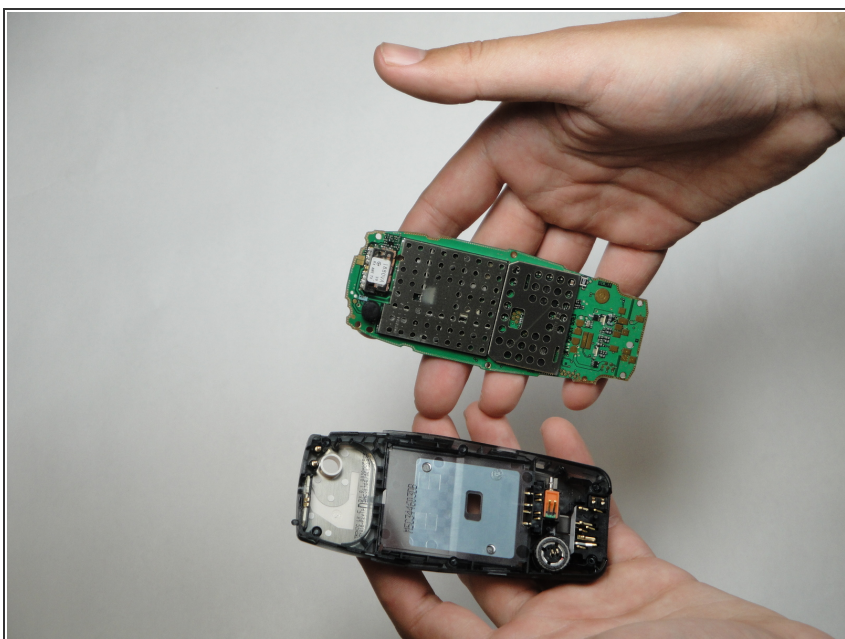

- With the screws removed, the logic board can then be lifted out of the body by hand.

## Step 9 — Disassembling Nokia 3560 Vibrator

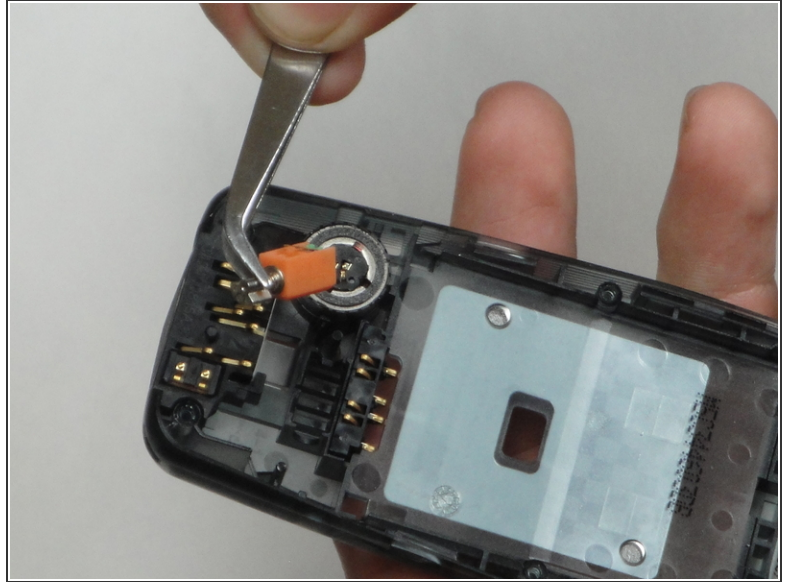

- The orange piece is the vibrator.
- It is not fastened by any means.
- Remove with tweezers.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 08:58:11 AM.